BWD
VSD BOOSTER PUMP

BENEFITS




- High efficiency Permanent Magnet Synchronous Motor (PMSM)
- Variable frequency & constant Pcressure
- Wide range of pressure settings (20% - 95%)
- IP55 protection
- Stainless Steel 304 Impellers
- PCB Sealed with Potting Compound
- **Pump Link Mode** - Two pumps can be installed together,
- with each pump switching on or off independently based on demand. Host & Slave pump: Auto - Alternating run mode
- **WiFi Function:** Control your pump using the Smart Life App

TECHNICAL DATA

MODEL	BWD-1200	BWD-2200
Power	1200W	2200W
Voltage	165V - 260V 1ph	165V - 260V 1ph
Frequency	50Hz	50Hz
Max Flow Rate	10m³/h	20m³/h
Max Pressure	70m	60m
Rated Flow Rate	5m³/h	12m³/h
Rated Pressure	40m	40m
Inlet and Outlet Size	1.25" ×1.25"	2" × 2"
Max Water Temperature	40 °C	40 °C
Maximum Speed	4600r/min	4500r/min
IP Rating	IP55	IP55
Insulation Class	F	F
Cascade Function	Yes	Yes
Smart Life App	Yes	Yes

PERFORMANCE CURVE

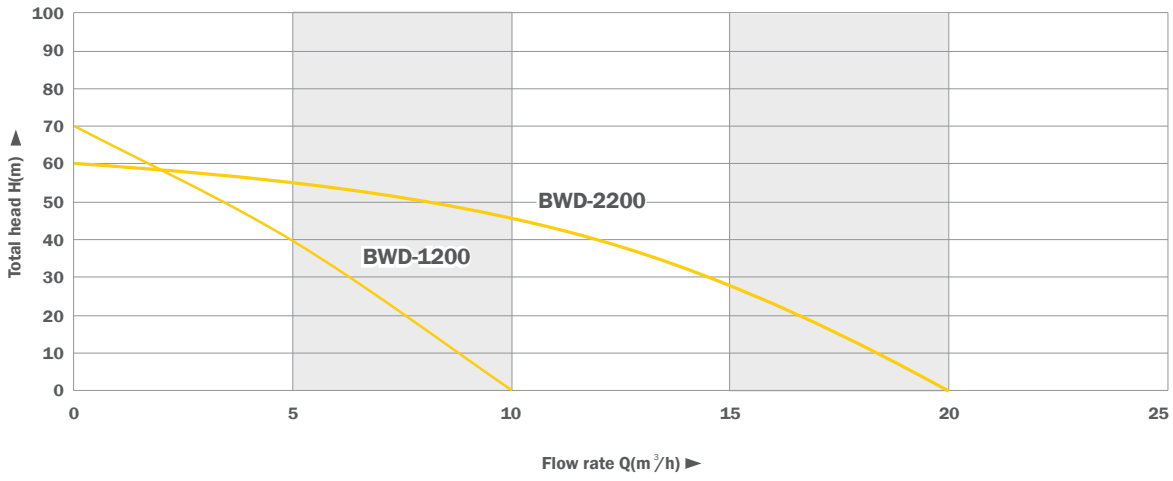

BWD
VSD BOOSTER PUMP

1. Soft start and soft stop
2. Phase loss protection
3. Water shortage protection
4. Overcurrent protection
5. Stall protection
6. Input voltage over/under protection
7. Driver board overheating protection
8. Pipeline Leak Warning
9. Motor temperature sensor warning
10. Water temperature sensor warning
11. Pressure sensor failure warning

VISUAL PARAMETERS & EASY OPERATION


2 LEDs Display
- Operating pressure
- Set pressure

5 buttons
- UP button
- Down button
- On/Off button
- Reset button
- Contact button (Optional: Pump link mode)



6 indicators
- Constant pressure indicator
- Pipeline leakage indicator
- Input voltage fault indicator
- Water shortage protection indicator
- Pump output power level indicator

CONTROL PANEL OPERATION INSTRUCTIONS
WIFI & PUMP LINK | ALL IN ONE

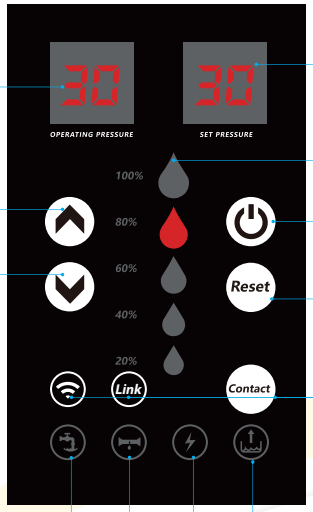

Operating pressure display

Short press- Increases the target pressure

(Exit pressure setting after 5s of no operation)

Short press- Decreases the target pressure

(Exit pressure setting after 5s of no operation)

Long press for 3s each time to display

1.Water temperature: A.xx
2.Pump power: P.xxx
3.Motor speed: xxxx
4.Input voltage: U.xxx
5.PCB temperature:t.xx
6.Recovery pressure display

Constant pressure mode

Light on: Power connect
Light off: Power disconnect

Pipeline leakage

Check pipeline & valve leakage
Pipeline leakage indicator will flash if the pumps has turned off more than 5 times due to a leak

To reset, the pumps would need to achieve one of the following conditions:
1.The pump needs to run for 180 seconds without turning off due to a leak
2.The pump needs to turn off on the target pressure and needs to maintain the target pressure for a minimum of 180 seconds

Target pressure display

(Starting pressure = 80% ×Target stop pressure)

Pump output power level
Lower power level will reduce power consumption at the cost of performance

Short press - Turn on the pump
Short press - Turn off the pump

Restore factory settings

Long press for Reset 3s

Enter pump link mode

Long press Contact + for 3s

Host's indicator : Always on

Slave's indicator : Flashing

Enter WiFi mode

Long press Contact for 3s

Indicator slow flashing: Offline / Wi-Fi pairing mode
Indicator fast flashing: Bluetooth connected
Indicator always on: Wi-Fi connected successfully
Indicator off: WiFi / Bluetooth not connected

Water sortage protection


1st Attempt: The pump will turn on and run for 360s before turning off due to water shortage. Pump will wait for 5 min before attempting to start up again.
2nd to 4th Attempts: The pump will turn on and run for 360s before turning off due to water shortage. Pump will wait 2hours before attempting to start again.
5th+ Attempts: The pump will turn on and run for 360s before turning off due to water shortage. Pump will wait for 6hours before attempting to start up again.

Input voltage fault


Light on: Input voltage is belowe 150v or above 270v
Light off: Input voltage is within acceptable parameters

PUMP LINK MODE


- Combined capacity for higher flow rate
- Intelligent control to match varying demands
- Dual pumps create a backup in case of failure
- Alternating startups reduce wear on the pumps
- Startup of a single, small pump reduces power consumption compared to a larger pump

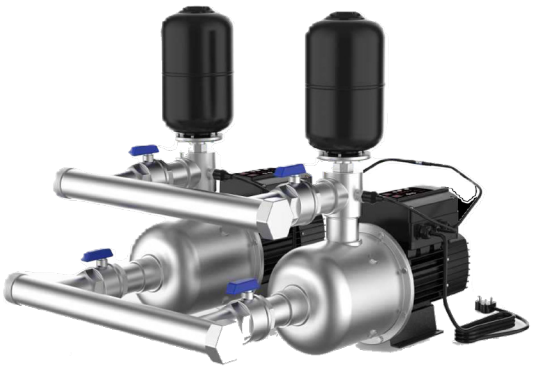


SINGLE PUMP & WIFI OPERATION INSTRUCTIONS

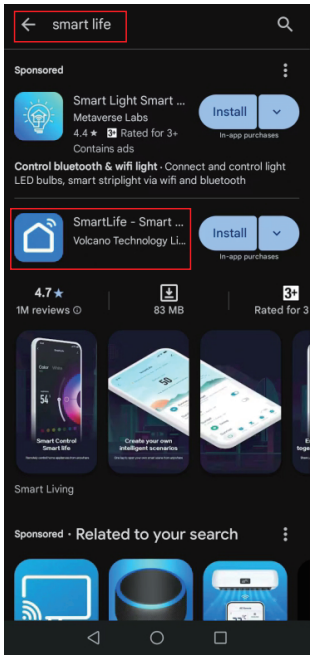


1. Download SmartLife from Google Play

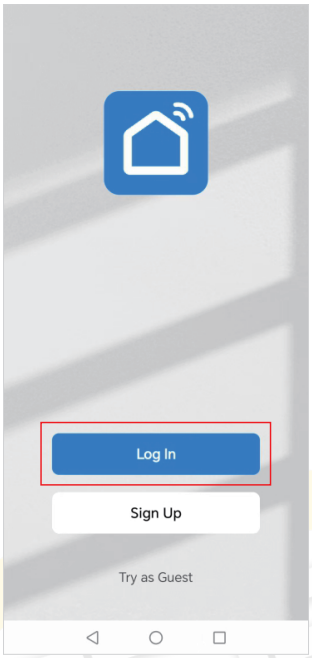


2. Log In or Sign Up

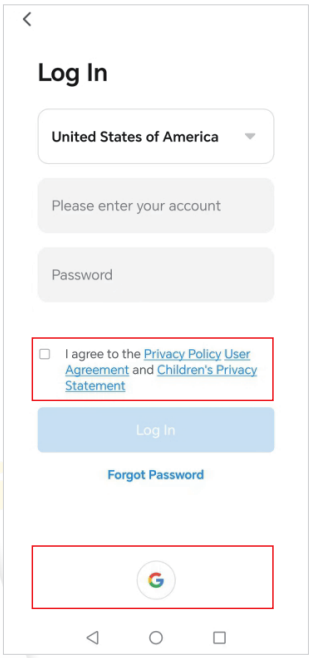


3. Log in with Google Account

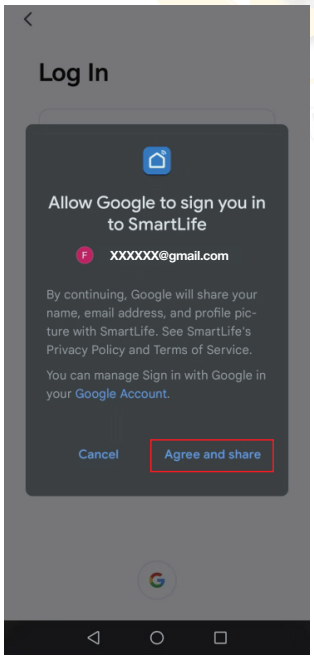

4. Agree and share

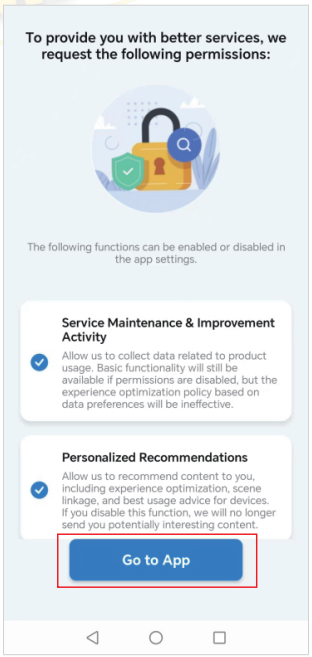


5. Go to App

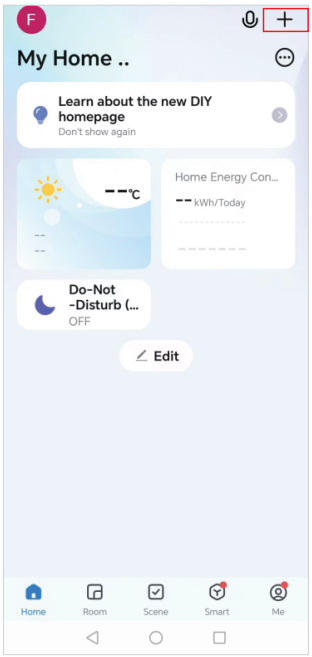


6. Click + to add device


SINGLE PUMP & WIFI OPERATION INSTRUCTIONS

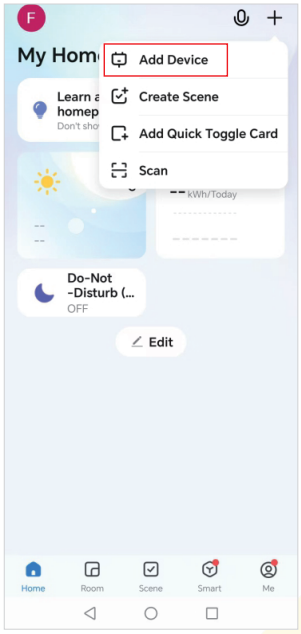


7-1. Add device

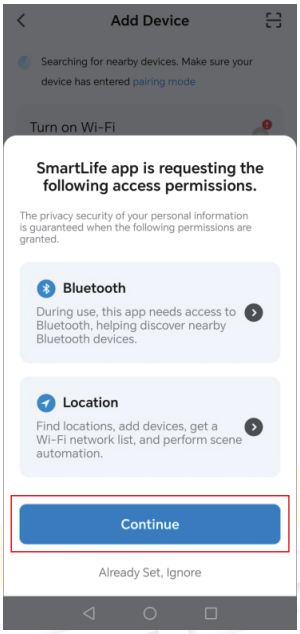


7-2. Add device

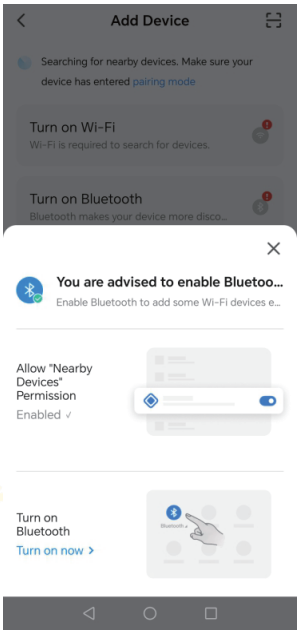

7-3. Add device

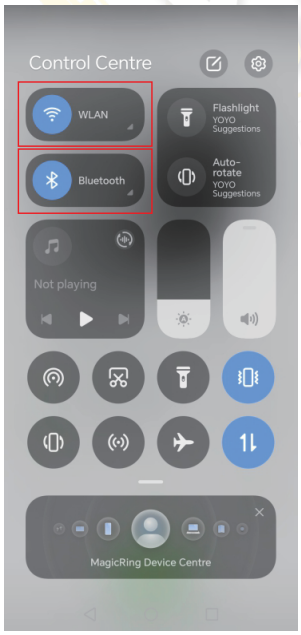

8. Make sure Bluetooth and WLAN are turned on

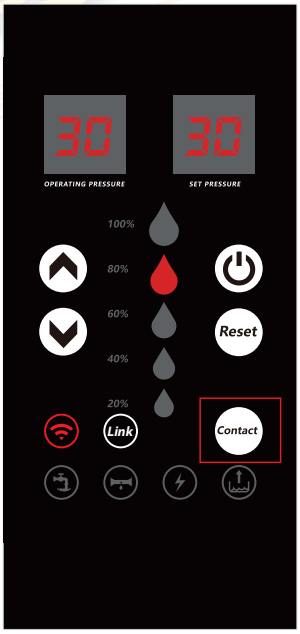

9.Long press Contact for 3S



10. Add Device

Note:
WiFi & Bluetooth required for first pairing;
Bluetooth only afterward

SINGLE PUMP & WIFI OPERATION INSTRUCTIONS



Real-time operating pressure of the pump


If only one pump is connected the slave pump will display “Offline.”

Water temperature in the pipeline


Refresh data or update delay.

Start / stop pump


Set target stop pressure

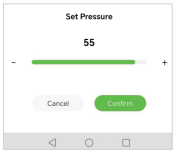

Parameter preview

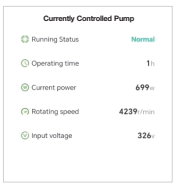


Historical data

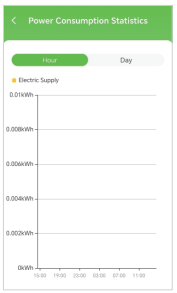


TWIN PUMP & WIFI OPERATION INSTRUCTIONS

Twin Pump & WiFi Operation Instructions

① Connect and secure the data cables of both pumps together.

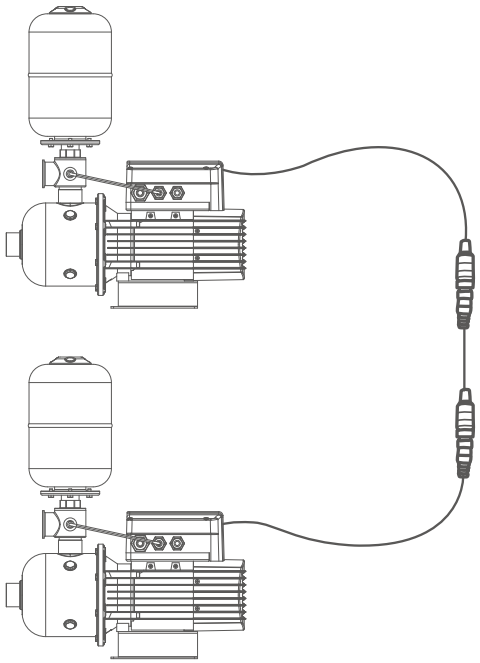


② Pump 1 and pump 2 outlets are connected in parallel.

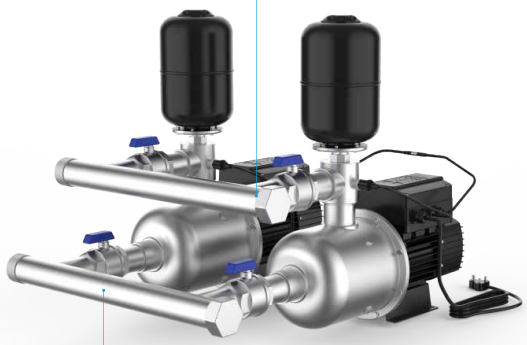

Pump 1 and pump 2 inlets are connected in parallel.

④ Ensure that the starting pressure and target stop pressure of pump 1 and pump 2 are the same

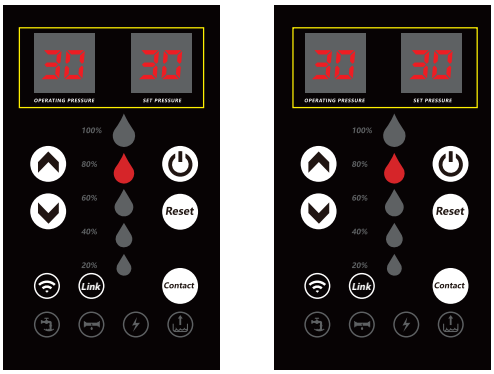


Pump 1 Pump 2

⑤ Select 1 of the 2 pumps as the host
(Example:Pump 1 as the host)

Contact + Contact

Long press & hold the buttons for 3S

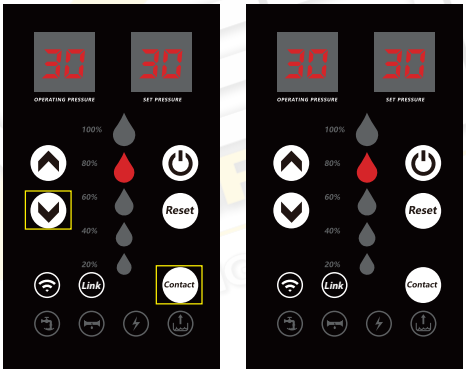


Pump 1 Pump 2

Pump 2 will be the slave

Link Slave's indicator : Flashing

Pump 1 will be the host

Link Host's indicator : Always light on

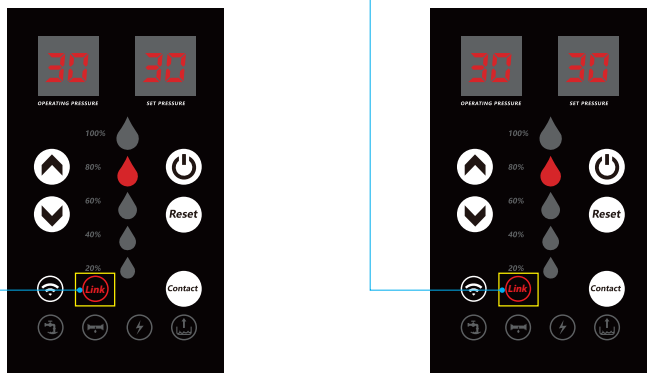


PUMP LINK MODE - OPERATION


Menu Contents	Menu Marker	Default value	Description
Pump link mode Aiternating run settings	L1	0	0: Auto - Host and slave pumps alternate. Alternation will take place on startup
			1 -24: Timing - Host and slave pumps alternate. Alternation will take place after a se time.




DISABLING PUMP LINK MODE

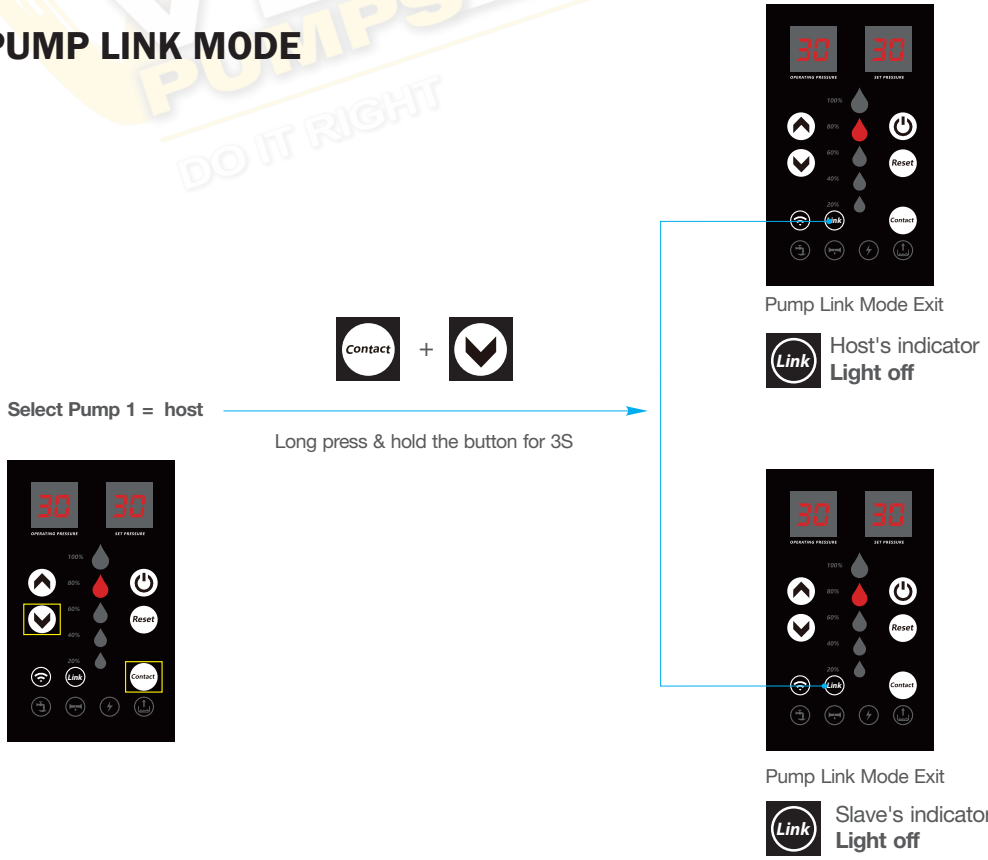


TWIN PUMP & WIFI OPERATION INSTRUCTIONS

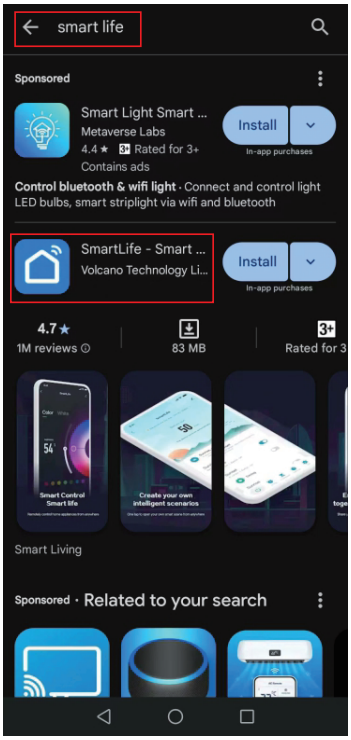


1. Download SmartLife from Google Play

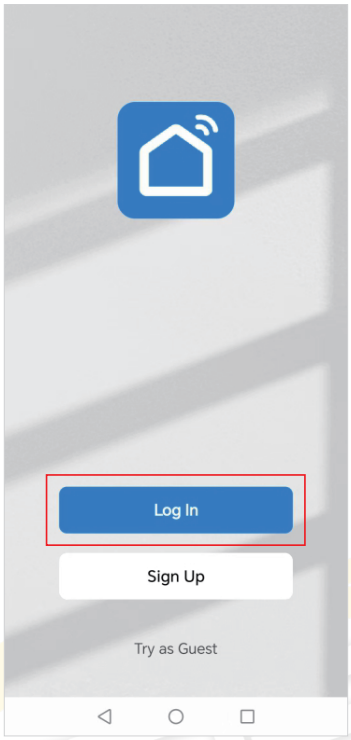


2. Log In or Sign Up

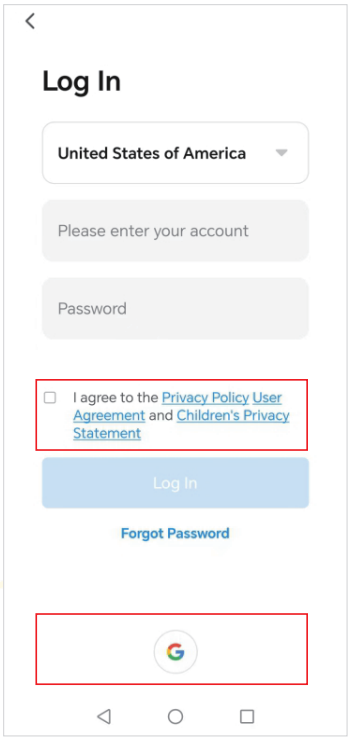


3. Log in with Google Account

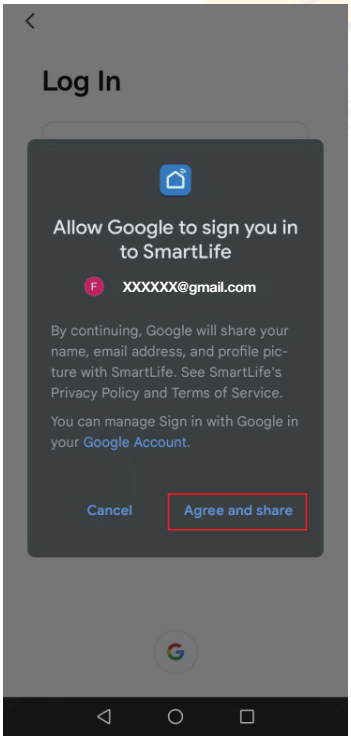


4. Agree and share

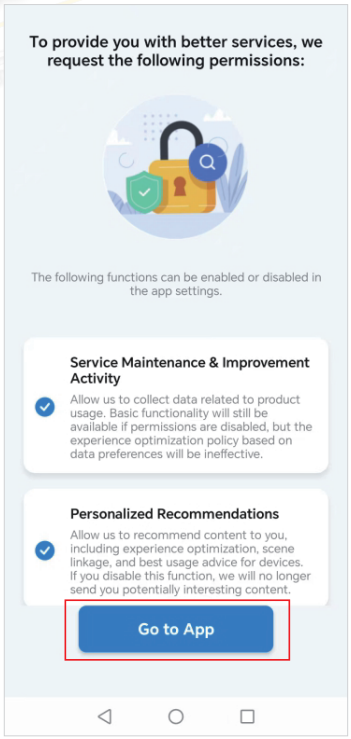


5. Go to App

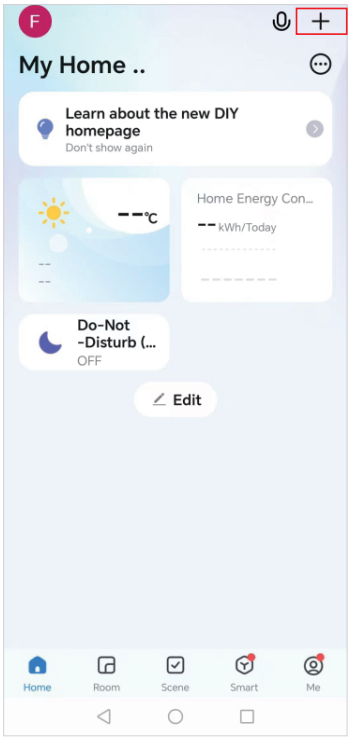


6. Click + to add device

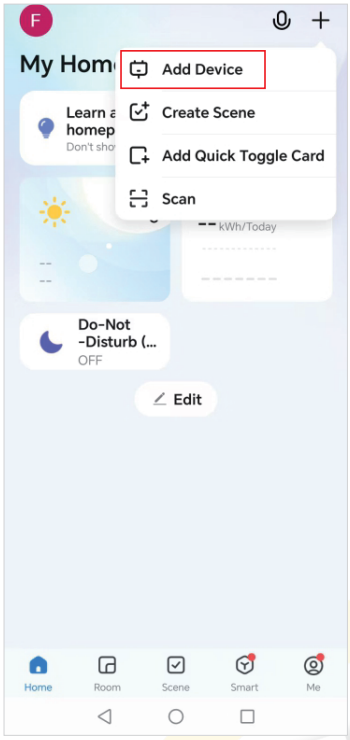


7-1. Add device

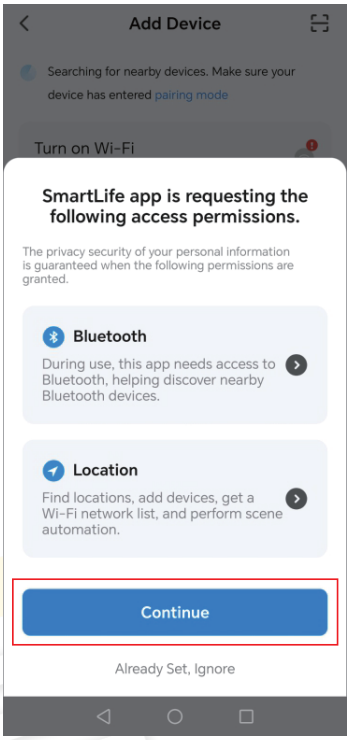

7-2. Add device

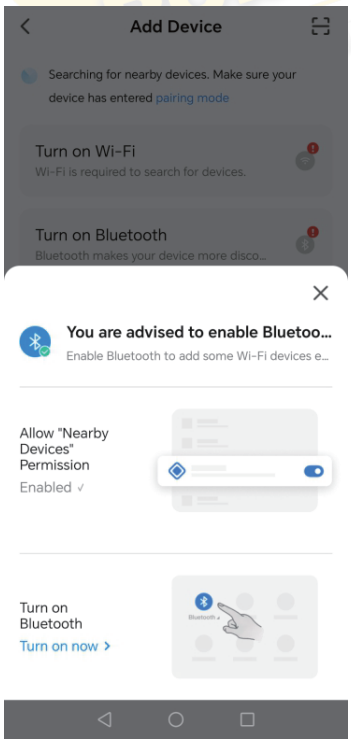


7-3. Add device

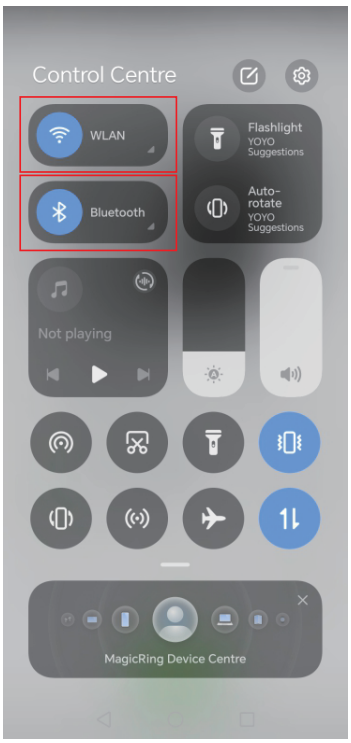


8. Make sure Bluetooth and WLAN are turned on


TWIN PUMP & WIFI OPERATION INSTRUCTIONS

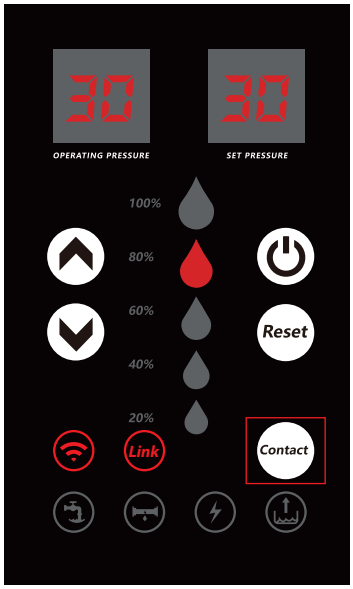


9.Long press Contact for 3S on the **host pump**

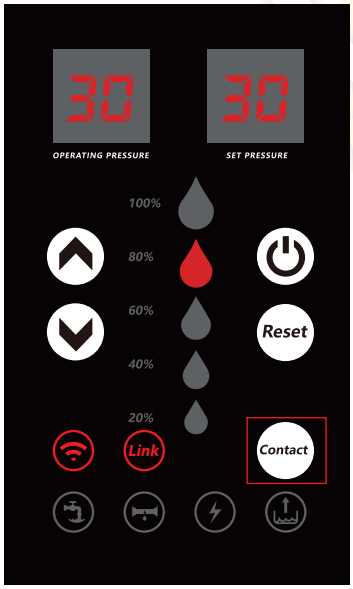

10. Long press Contact for 3S on the **slave pump**

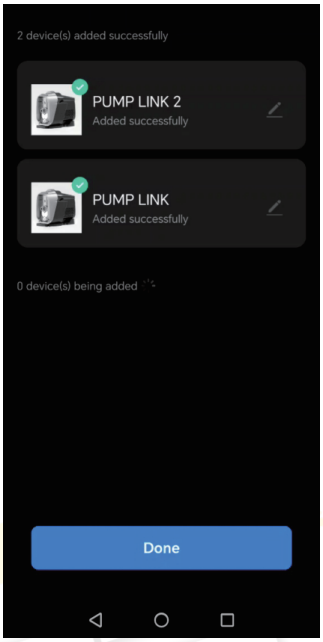

11. Add Device

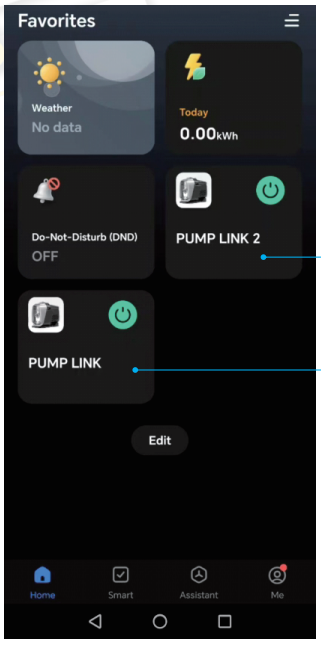

12. Control interface preview

Slave Pump
For monitoring slave pump parameters only. Settings cannot be changed on this unit, only on the host unit.

Host Pump
Twin pump control & monitoring

TWIN PUMP & WIFI OPERATION INSTRUCTIONS - HOST PUMP



Real-time operating pressure of the host pump


Real-time operating pressure of the slave pump

Water temperature in the pipeline


Refresh data or update delay.

Start / stop pump


Set target stop pressure

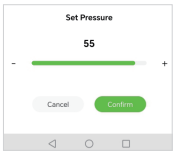

Parameter preview

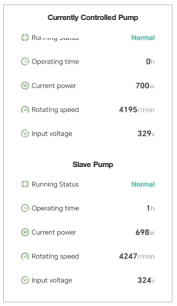

Historical data

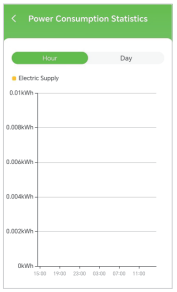

COMMON ERROR AND PROCESSING METHODS

Fault Codes	Fault description	Fault resolution
E01	Communication failure between display board and main board	Please check whether the display board is properly connected and try again. If the problem cannot be solved, the display board or main board is faulty.
E02	Stall protection	Check if the motor is stuck. How to recover after the alarm: 1. Automatically try to restart after 5 seconds, try 3 times 2. User presses the power button to restart and recover
	Input voltage fault light is on	Please use a multimeter to check whether it is normal Light on: <150 or >270V(Default) Light off: >160 or< 260V(Restore)
E04	Pressure sensor failure	Please check the pressure sensor interface for poor contact, and re-plug it. If the problem still cannot be solved, replace the pressure sensor.
E05	Motor failure overspeed, underspeed, loss of step	Turn off the power, wait for the panel light to go out, then turn on the power again. If it still cannot be restored, the motor or driver board is damaged. How to restore after the alarm: 1. Automatically try to restart after 3 seconds, try 5 times 2. The user presses the power button to restart and restore
E06	Phase loss	Check if the motor wire is loose or not connected properly. How to recover after the alarm: 1. Automatically try to restart after 60 seconds, try 5 times 2. User presses the power button to restart and recover
E07	Controller overcurrent	Check if the motor is short-circuited or the wrong motor is connected. Driver damage How to recover after the alarm: 1. Automatically try to restart after 60 seconds, try 5 times 2. User presses the power button to restart and recover
	Water shortage protection light is on	There is water in the pump chamber but no water at the inlet or the amount of water at the inlet is too little. How to recover after the alarm: 1. The current pressure drops by more than 3 m or the current pressure rises by more than 3 m 2. Restart after shutdown 3. The user presses the power button to restart and recover

Pumps On Line - www.pumps.co.za

COMMON ERROR AND PROCESSING METHODS

Fault Codes	Fault description	Fault resolution
	Pipeline leakage light is on	A leak in the pipeline was detected, and the water pump started and stopped frequently. How to recover after the alarm: **Alarm conditions - Light on:** Pump starts/stops > 5 times **Reset condition (satisfy any one) - Light off:** 1.Continuous running 180s 2.Stop 180s, pressure not dropping
E12	Driver board overheating fault IPM temperature sensor fault	When driver temp reaches 85°C, pump reduces power (auto adjusts with temp, max 50% reduction) Automatically resume operation after the temperature drops (Default protection: 91°C, recovery: 80°C)
E09	High water temperature protection	Trigger Condition: Water temperature ⩾75°C → Pump stops Exit Condition: Temperature drops by 9°C **Default: 75°C, Restore: 66°C**
	Low water temperature protection (The bottom light of the pump output power level indicator flashes)	Trigger Condition: Water temperature ⩽3°C → Pump runs at low speed. Exit Condition: Temperature rises by 4°C or after 10 mins of continuous operation. Re-Trigger: If temperature remains ⩽3°C, re-enters protection after 5 s **Default: 3°C, Restore: 7°C**